

ADJUSTMENT AND BALANCING OF THE FLOW RATE ADJUSTERS

- 1: Remove the orange cover as shown in figure 1.
- 2: Set the flow rate adjuster in the closed position by turning the upper lock ring in the direction indicated by the arrow in figure 2. In the closed position, the indicator shows as a zero value.
- 3: Then open by turning the same lock ring in the opposite direction (figure 3), checking the correct setting is indicated on the spyglass.
- 4: Tighten the lower lock ring in the direction indicated by the arrow in figure 4 to the mechanical stop.
- 5: Lastly reposition the orange cover (figure 5).

At this stage, without having to remove the orange cover again, it is possible to close the adjuster by turning it directly by the orange cap. This will not lose the setting you have just entered and the valve will automatically stop at the mechanical stop when you try to reopen the adjuster.

Please note the lower mechanical lock (figure 4) has a reverse direction thread and to loosen it off you need to turn it clockwise and anti clockwise to lock it into position

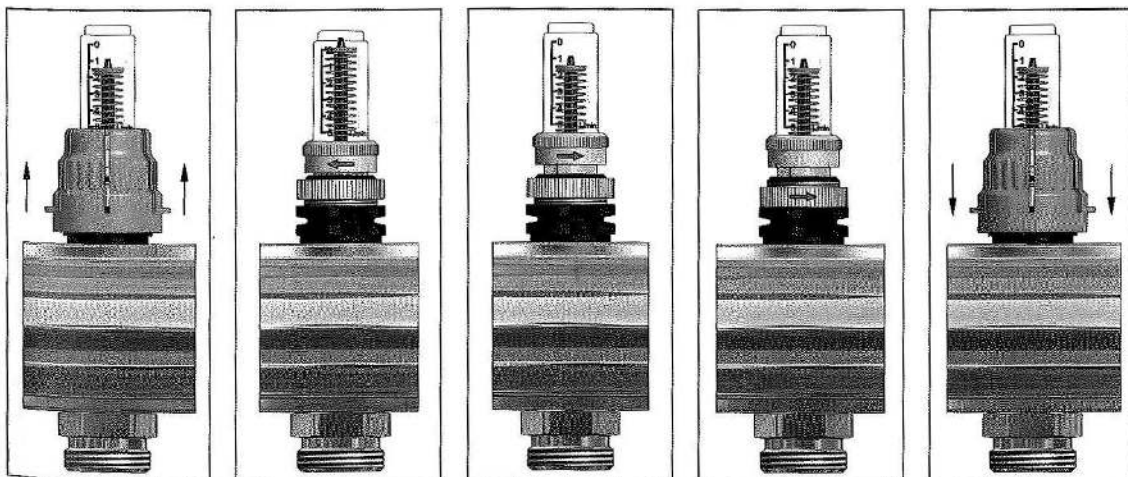


Fig. 1

Fig. 2

Fig. 3

Fig. 4

Fig. 5