

## FRANKISCHE UK LTD.

## FIRST FIX SCHEMATIC DIAGRAM

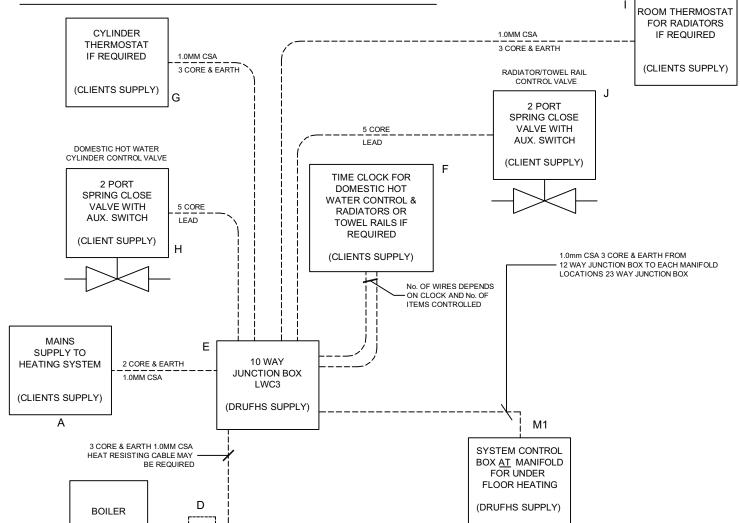

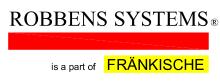

TO AID FIRST FIX WIRING NOTE LOCATION OF ALL ITEMS REQUIRED BELOW: THEN RUN CABLES

ITEM	LOCATION
Α	BOILER ROOM
В	BOILER ROOM
С	NEAR OR IN BOILER
D	NEAR BOILER
Е	NEAR BOILER
F	NEAR BOILER TO CLIENTS CHOICE
G	D.H.W CYLINDER
Н	FLOW OR RETURN D.H.W CYLINDER
I	ROOM WITHOUT TRV
J	FLOW OR RETURN RADS
M1	

UP TO 10 ROOM THERMOSTATS FROM EACH JUNCTION BOX EACH WIRED 3 CORE(+E)

0.75mm OR / 1 mm C.S.A.

ALL WIRING MUST COMPLY WITH CURRENT

Tel: 01424 851111

IEE REGULATIONS

SERVICE ISOLATOR

MAY BE REQUIRED

BOILER PUMP MAY

BE INSIDE BOILER (CLIENT SUPPLY)

(CLIENT SUPPLY)

2 CORE & EARTH


HEAT RESISTING

В

## ROBBENS SYSTEMS®



## SCHEMATIC OF HEATING SYSTEM COMBINATIONS

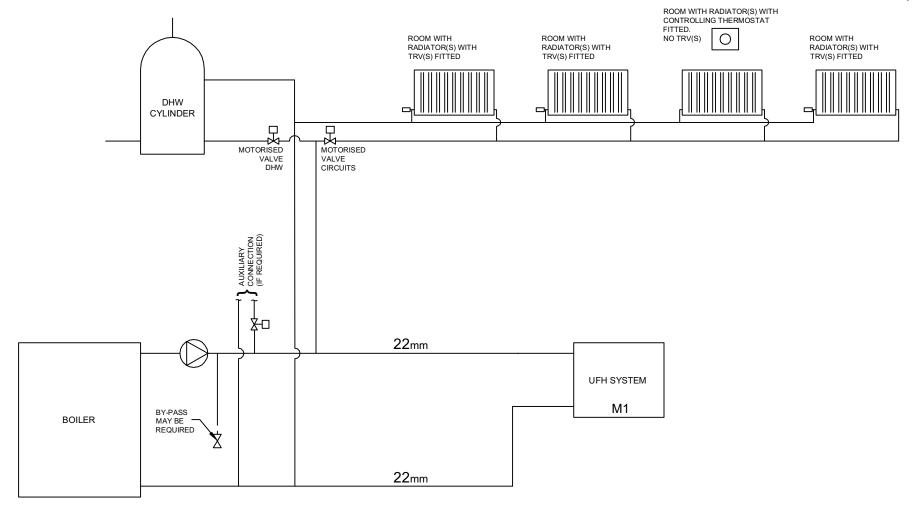

THE ABOVE SHOWS A SCHEMATIC OF A HEATING SYSTEM COMBINING UFH, A DHW CYLINDER & TOWEL RAILS.

EEED EYBANION BLUING DRAIN VALVES DESSUIDE VESSELS AND SAFETY.

FEED, EXPANSION, FILLING, DRAIN VALVES, PRESSURE VESSELS AND SAFETY VALVES HAVE BEEN OMITTED FOR CLARITY.

THESE MUST BE FITTED IN ACCORDANCE WITH EQUIPMENT SUPPLIERS INSTRUCTIONS AND COMPLY WITH LOCAL BYLAWS AND SAFETY LEGISLATION.

THE SYSTEM SHOULD BE ARRANGED WITH EACH TYPE OF HEATING EQUIPMENT ABLE TO CONTROL THE BOILER AND WORK INDEPENDENTLY OF THE OTHER HEAT EMITTERS.


NOTE: ALL PIPE SIZES ARE COPPER SIZE OR EQUIVILENT BORE

Tel: 01424 851111





## MAINS ISOLATOR/BOILER/BOILER PUMP & 10 WAY JUNCTION BOX WIRING .

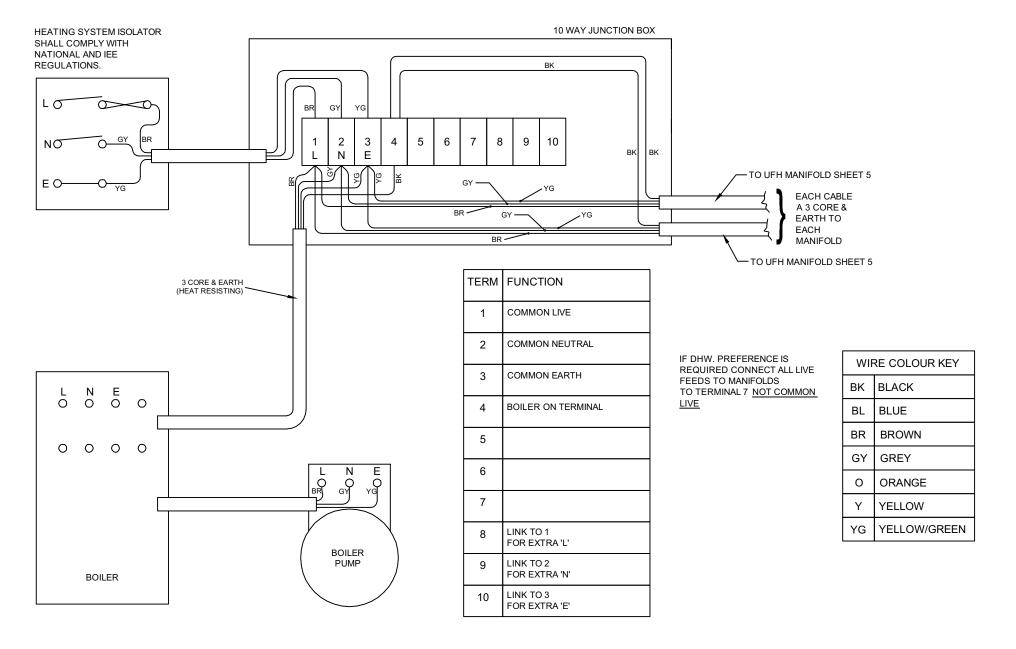


Tel: 01424 851111

# DOMESTIC HOT WATER CONTROL WITH UFH ON SAME BOILER





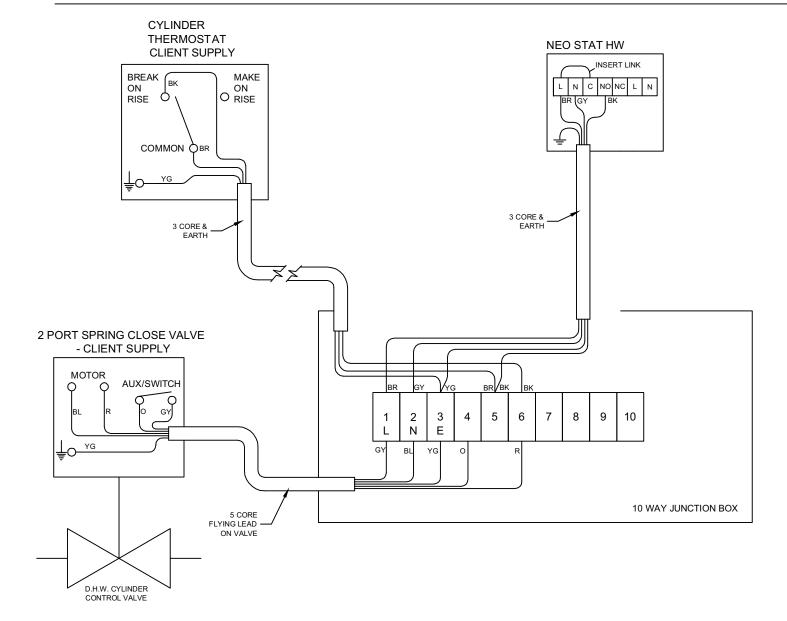


WIF	WIRE COLOUR KEY		
BR	BROWN		
BL	BLUE		
ВК	BLACK		
R	RED		
YG	YELLOW/GREEN		
0	ORANGE		
GY	GREY		


TERM	FUNCTION
1	COMMON LIVE
2	COMMON NEUTRAL
3	COMMON EARTH
4	BOILER ON
5	OUTPUT TO CYL. STAT.
6	ON SIGNAL CYL. STAT.
7	DHW. PREF. LIVE
8	RADS ON IF REQUIRED
9	
10	

ALL WIRING MUST COMPLY WITH CURRENT IEE REGULATIONS


## RADIATOR WITH UFH ON SAME BOILER

(CAN BE USED FOR TOWEL DRIER CIRCUIT)

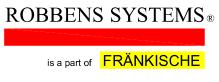

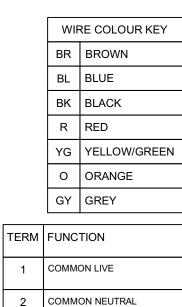


	IERM	FUNCTION
	1	COMMON LIVE
	2	COMMON NEUTRAL
	3	COMMON EARTH
	4	BOILER ON
	5	
	6	
	7	
	8	OUTPUT TO RADS ROOM THERMOSTAT
	9	ON SIGNAL RADS
	10	

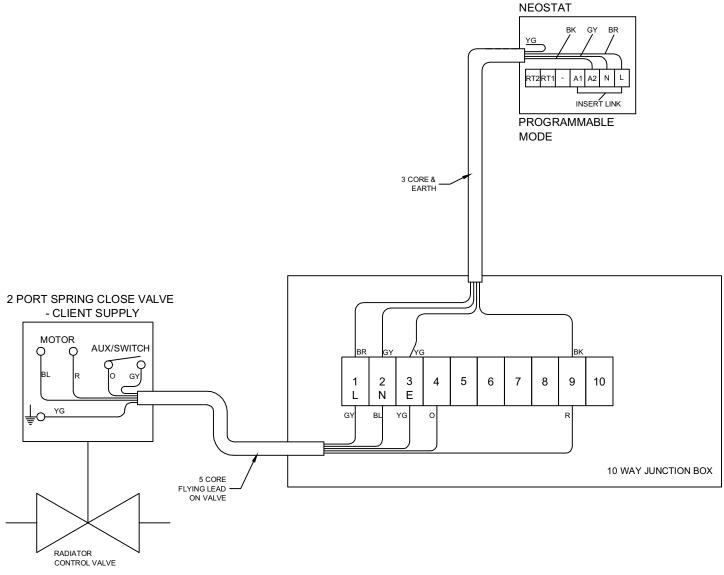

ALL WIRING MUST COMPLY WITH CURRENT IEE REGULATIONS

#### WIRING DETAIL FOR HEATMISER NEO RANGE OF CONTROLS


SHOWN CONNECTED TO ROOM 1 CONNECTORS (FOR EXAMPLE)

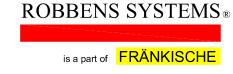

ISSUE 4 **CONTROLS** 

#### NOTES:

WET ROOM MODE REQUIRES A REMOTE SENSOR LOCATED IN THE WET ROOM AND POSITIONED BOX (PACKED SEPERATLY) AND CAN BE EXTENDED USING A SHIELDED NETWORK CABLE

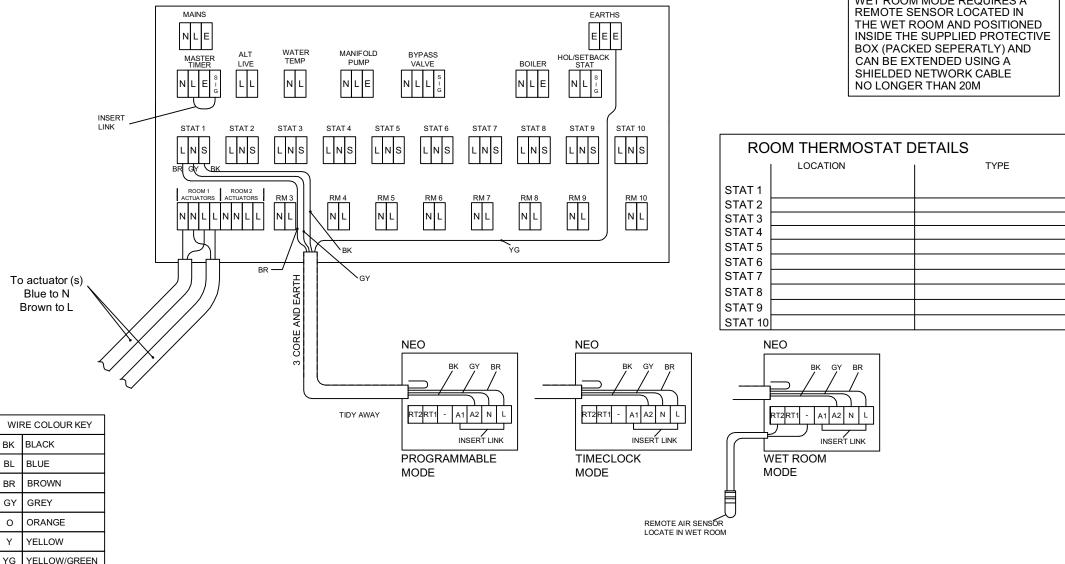

ALL WIRING MUST COMPLY WITH CURRENT IEE REGULATIONS.

Live to L Neutral to N

Signal to Sig

Earth to Earth Block

Actuator(s) wired to block below

Tel: 01424 851111

